




FAÇADE CREATIONS

Flat Glass
Deglazing Guide


REMOVE CORNER CAPS

1

Remove all corner caps from the unit

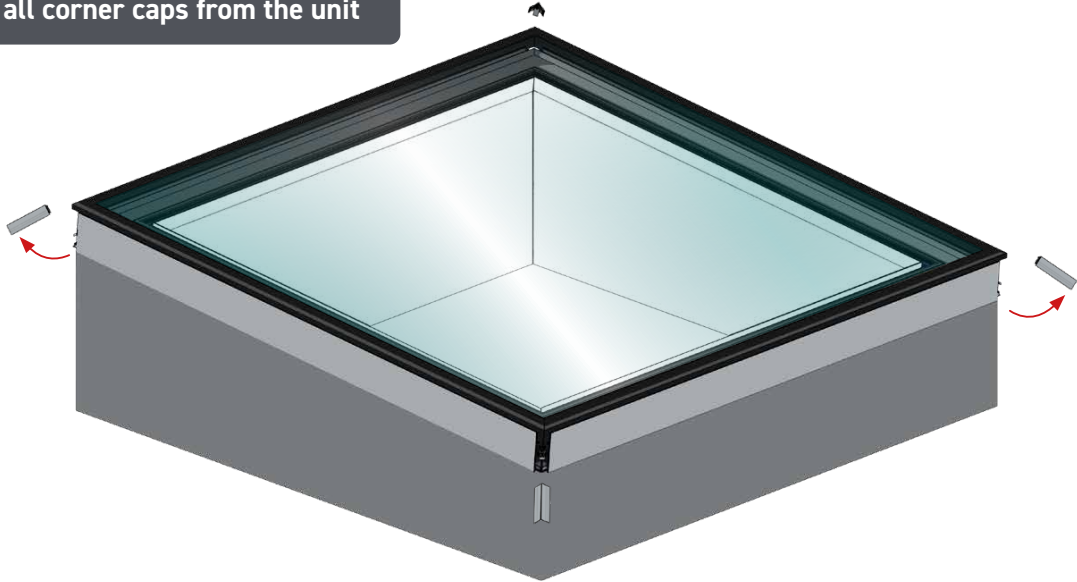

Rotate the bottom of the cap upwards to remove

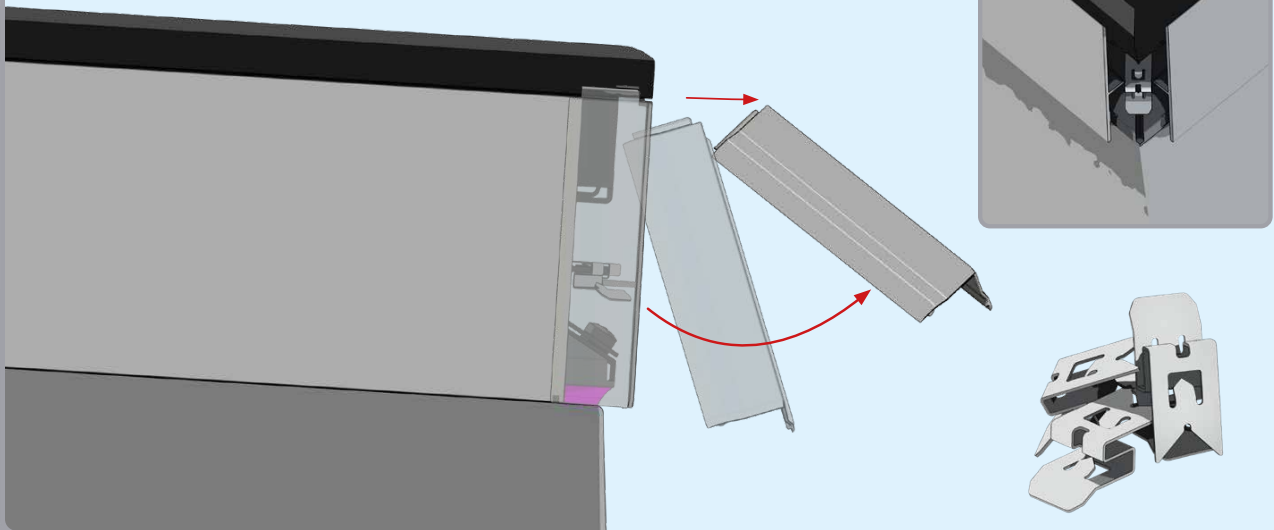


Remove clips and keep for re-install


REMOVE EXTERNAL FASCIA'S

2

Remove all external fascia

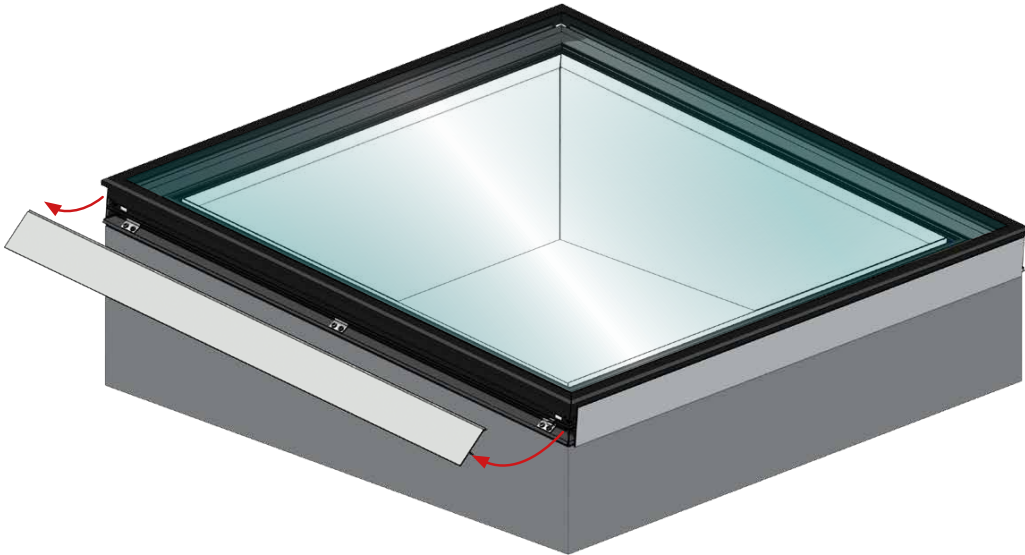

Pull from the bottom rotating the fascia

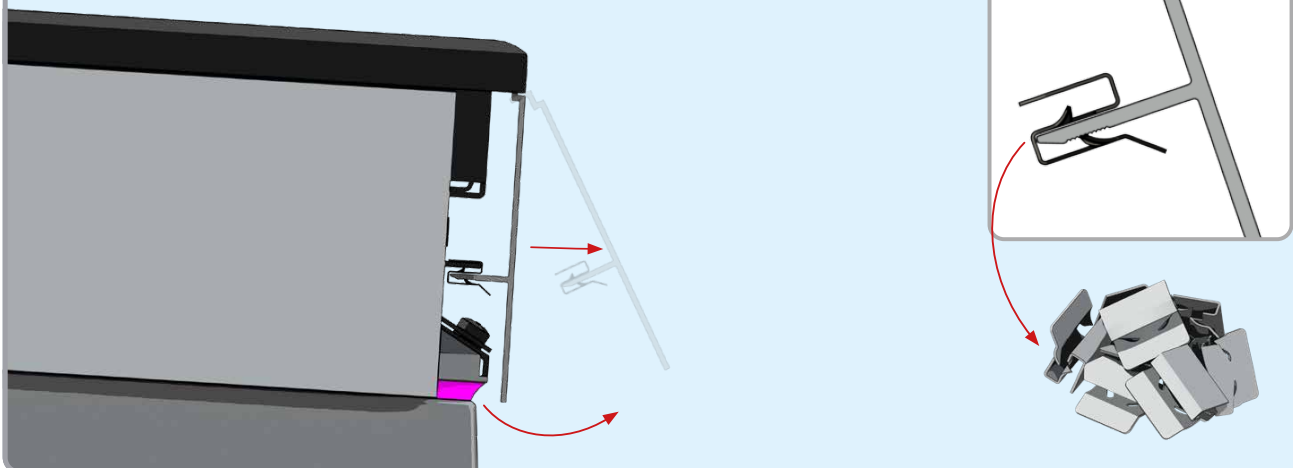



Remove clips and keep for re-install

REMOVE SECURITY SCREWS

3



Remove screws from retainer clips

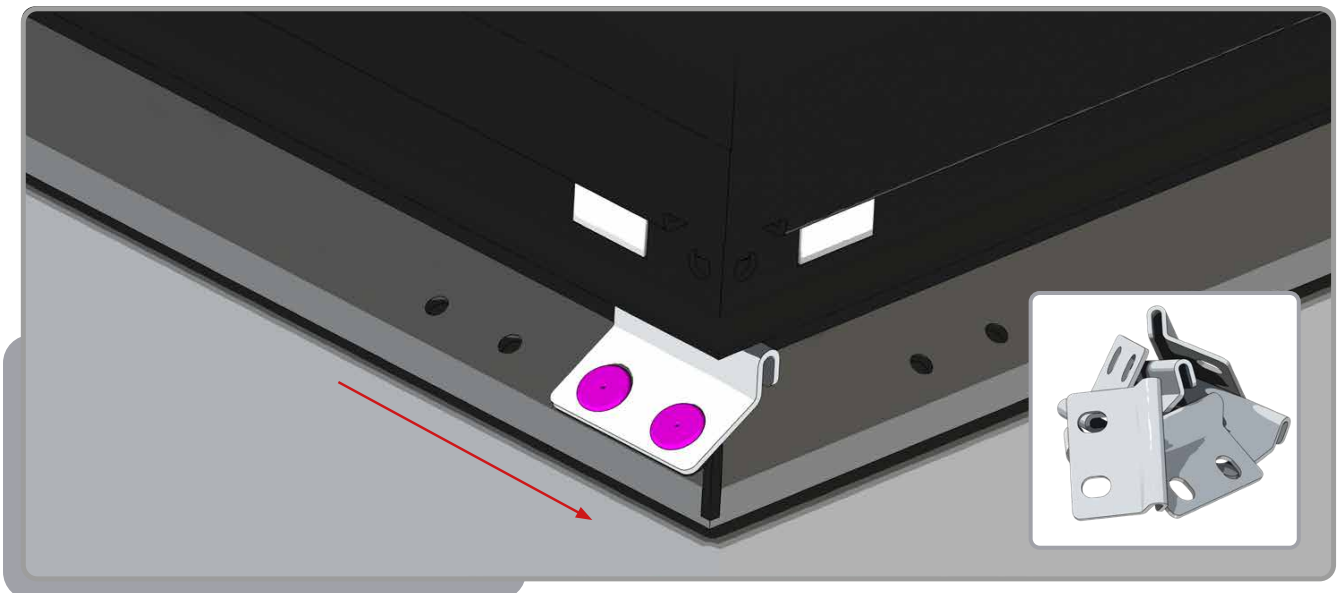
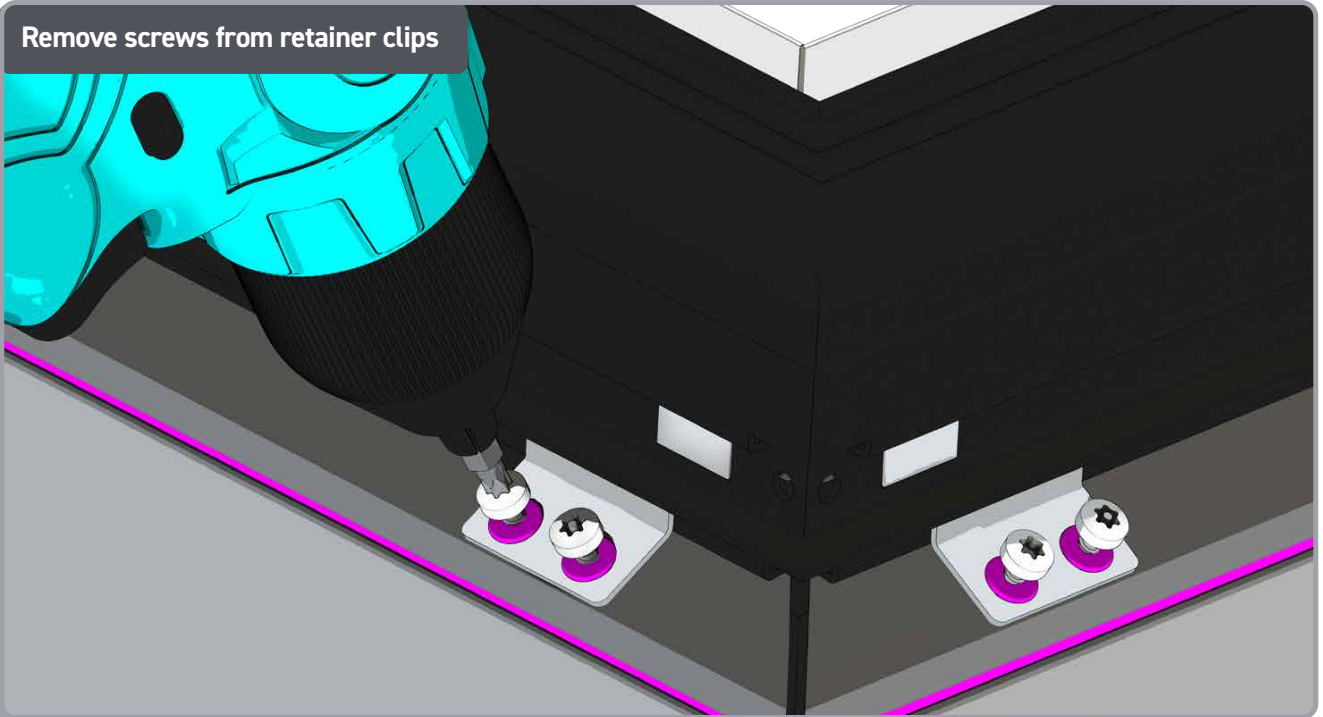


Remove steel brackets and keep for re-install

REMOVE GLAZING UNIT

4

Lift off the glazing unit

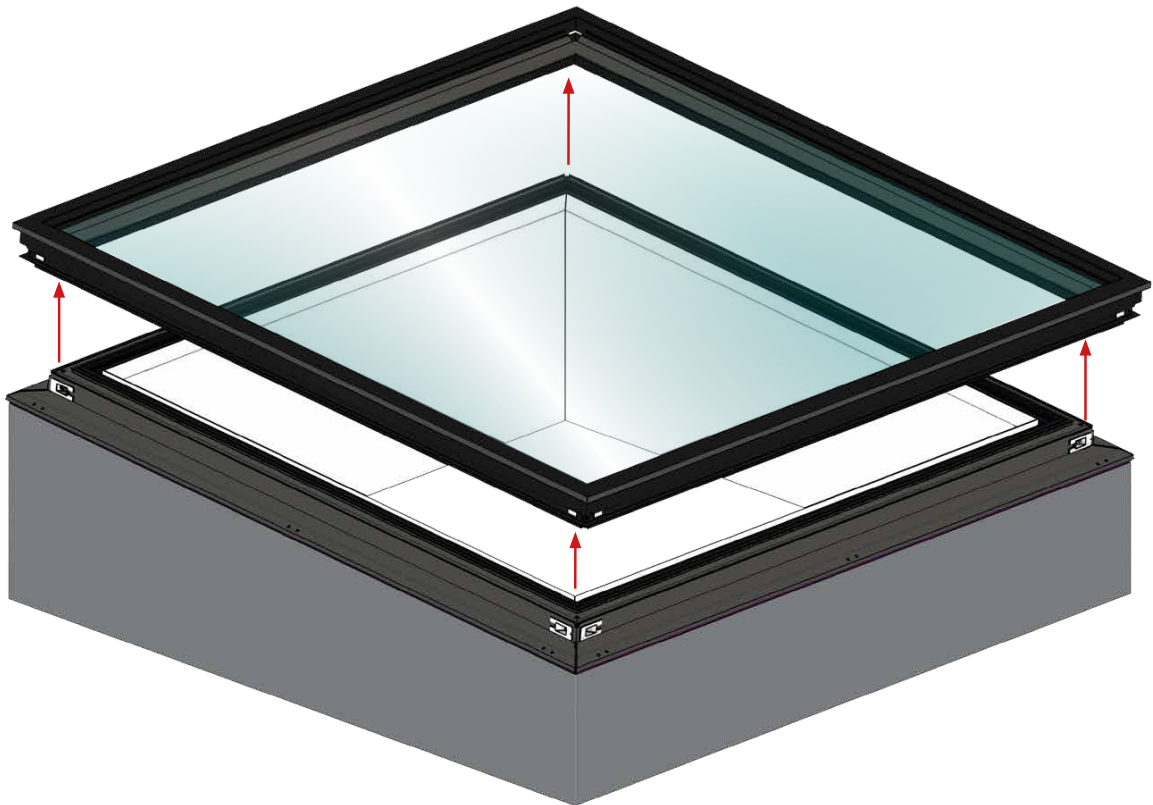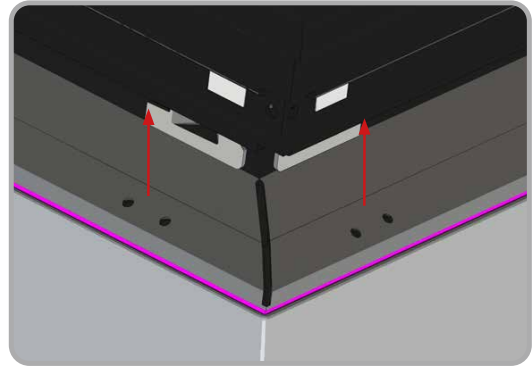

Store safely to avoid damage


REMOVAL OF GLAZING RETAINERS

5





1.5mm and 2.5mm hex key

Using a 1.5mm hex key loosen the corner key grub screws


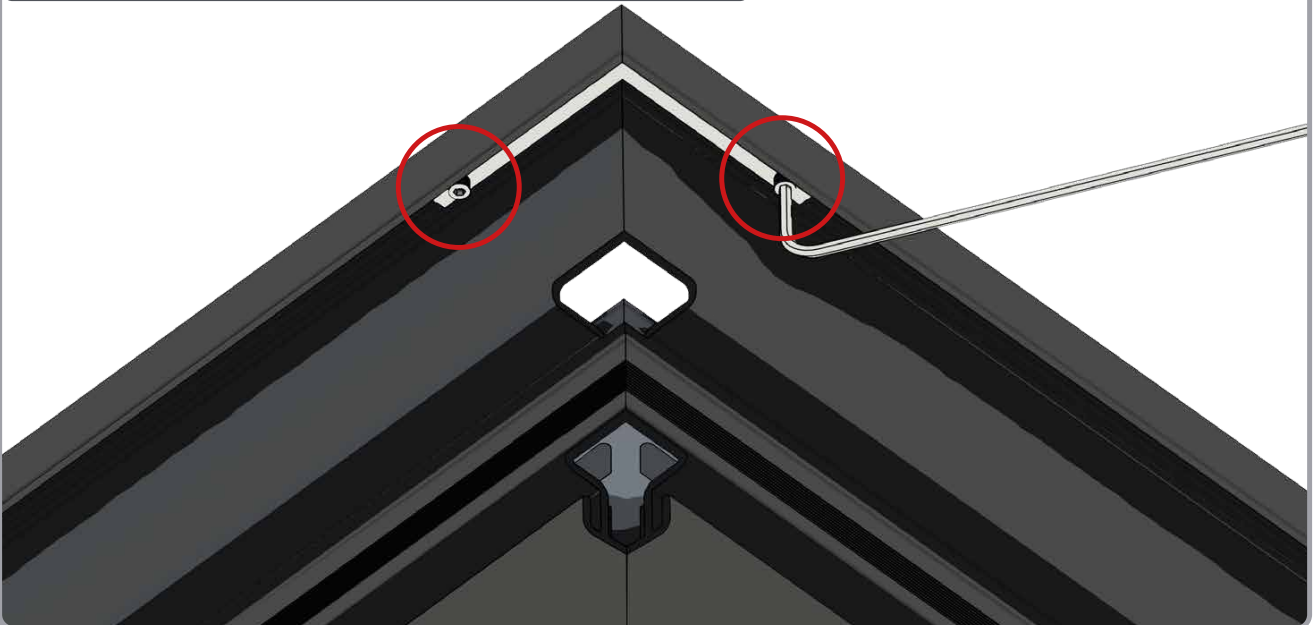


Using a 2.5mm hex key loosen and remove the pawls

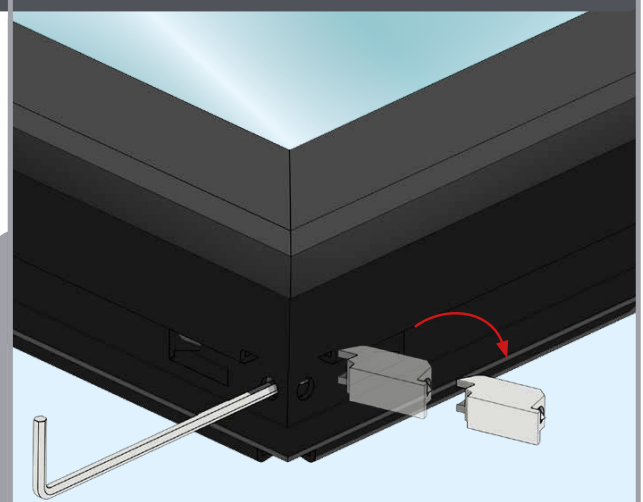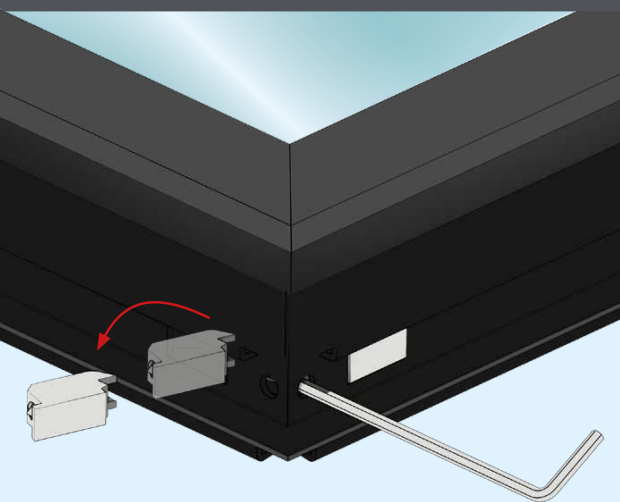

Repeat this process on all corners of the unit. Retain Pawls for reinstall


Remove the glazing retainers

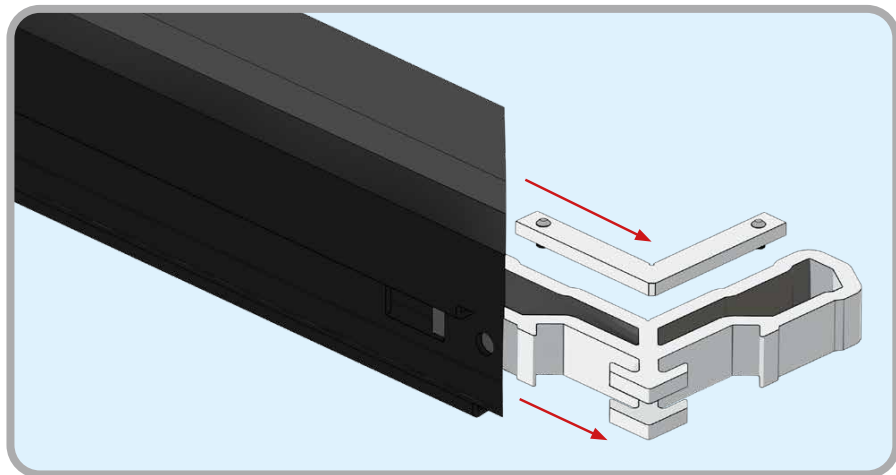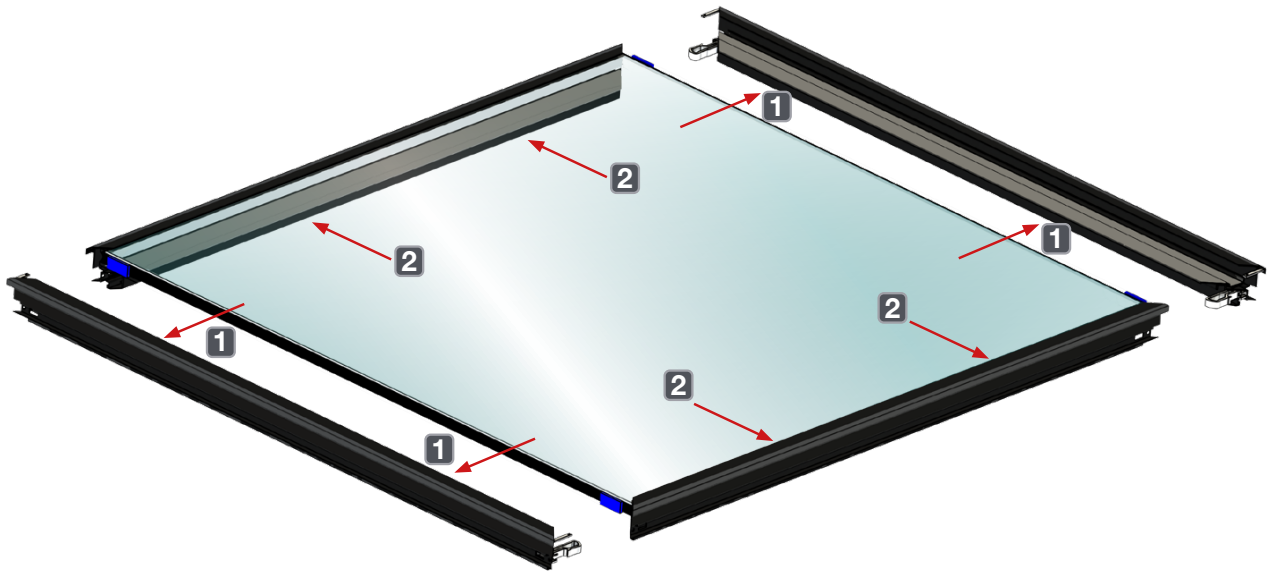

Remove corner keys and cleats, keep for re-install


RE-FITTING GLASS UNIT AND RETAINERS

6

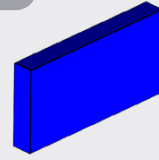


Before installing check glazing retainers for shards of glass or debris.
Clean if necessary.


Place the provided packers onto each corner of the glass panel

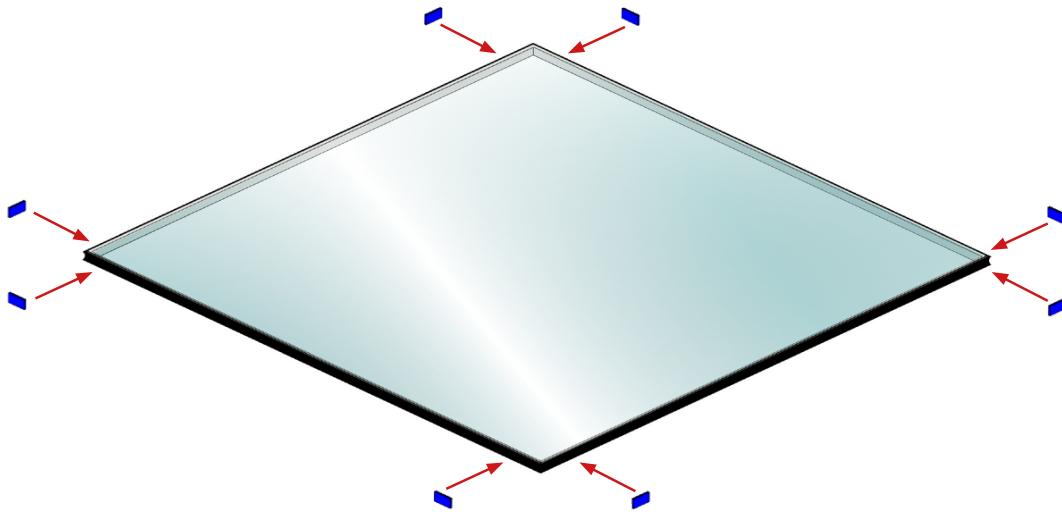





Set the packers 20mm in from the corners of the unit

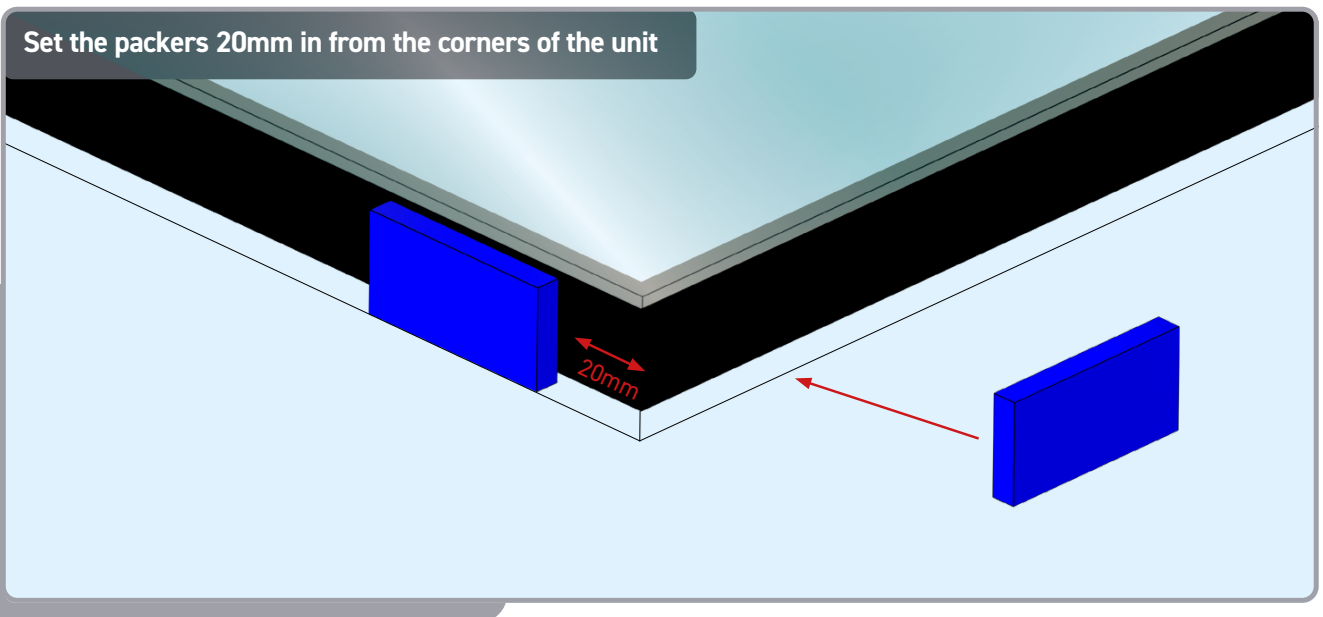

Push on the two glazing retainer widths

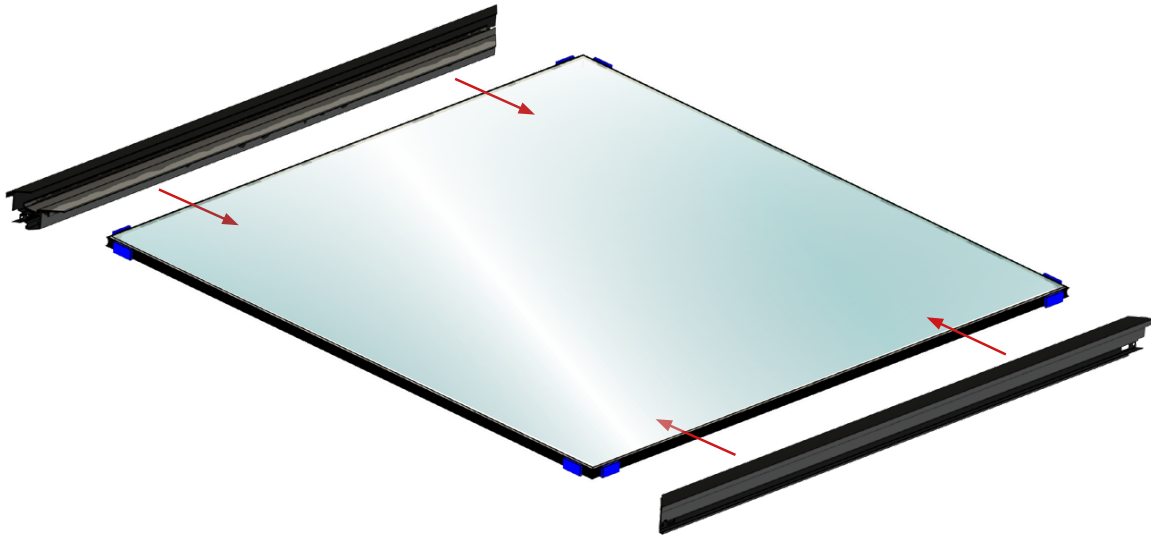

Ensure the corner key is correct way up and cleat aligns. Then fit the two glazing retainers lengths

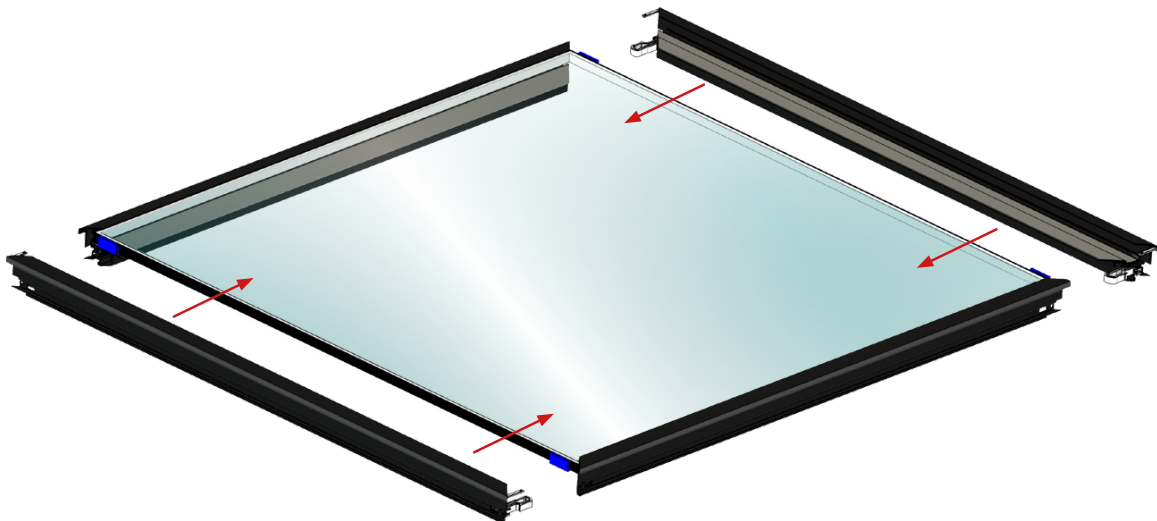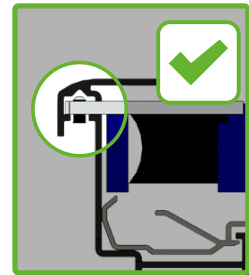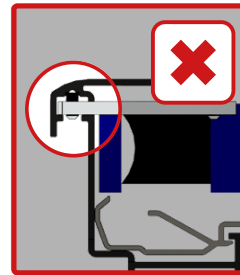
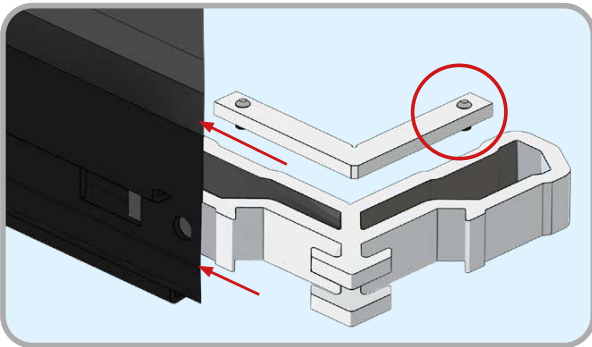


RE-FITTING GLAZING RETAINERS



7



Insert pawls into corner cleats

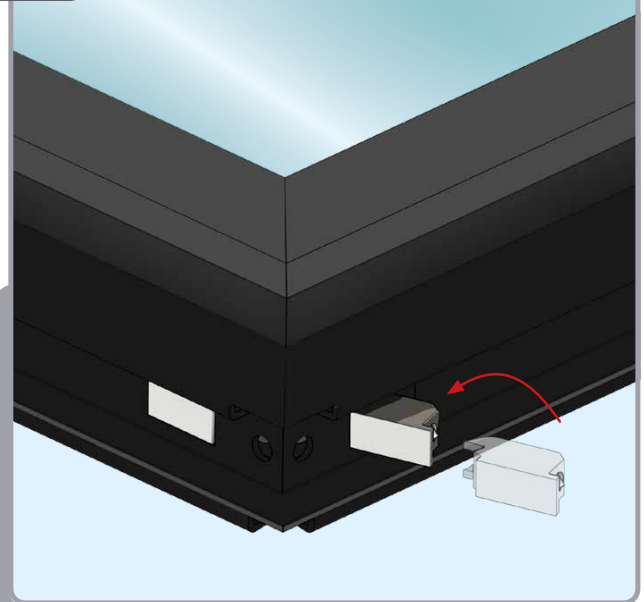
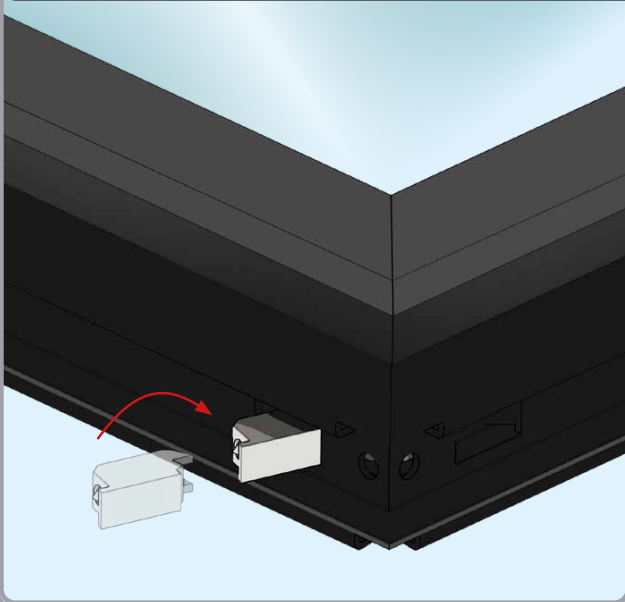


Using 2.5mm hex key tighten pawls so that the profiles edges sit flush

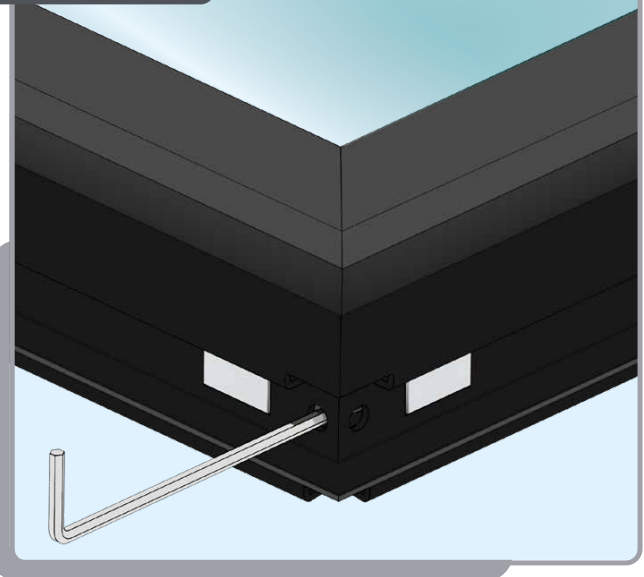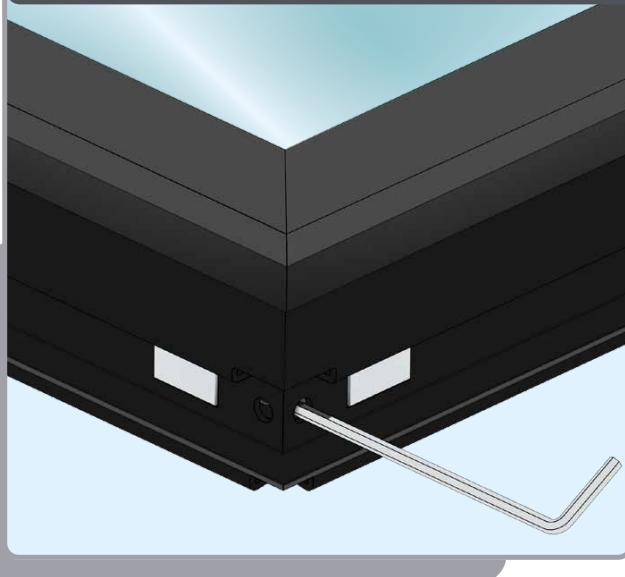




Adjust the pawls until profiles sit flush to each other

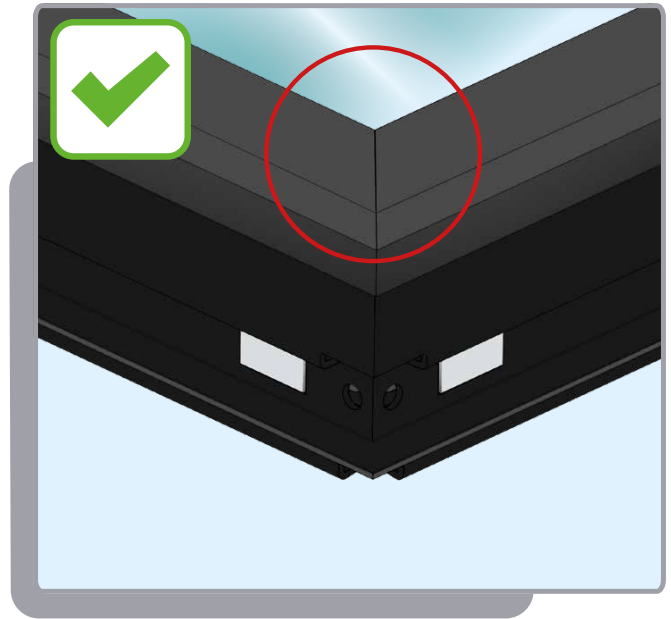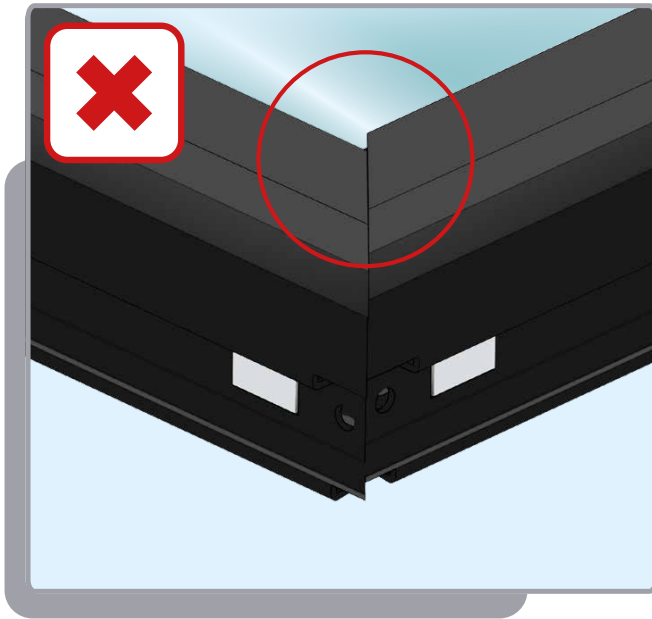

Using 1.5mm hex key, tighten the corner key grub screws to hold profiles in place


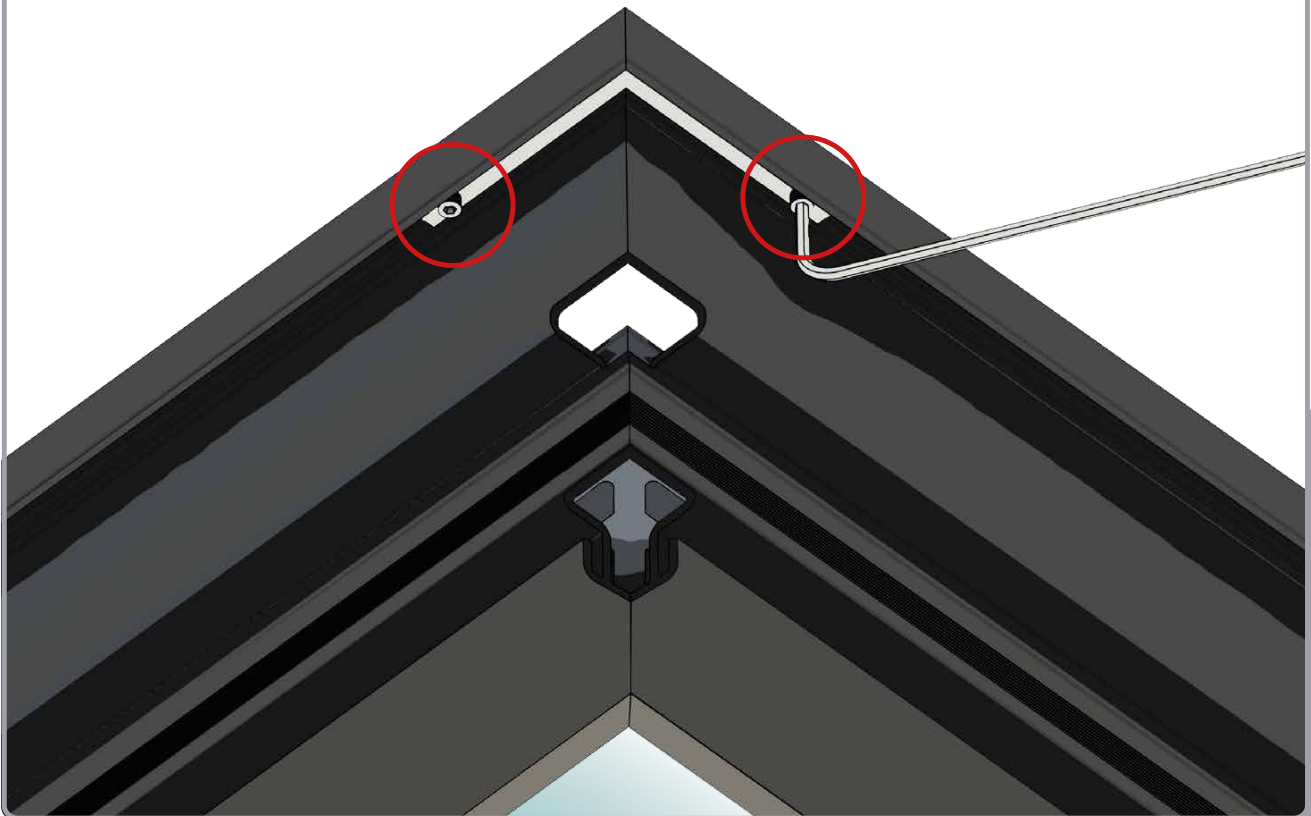


FITTING GLAZING UNIT

8




Place the glazing unit onto upstand

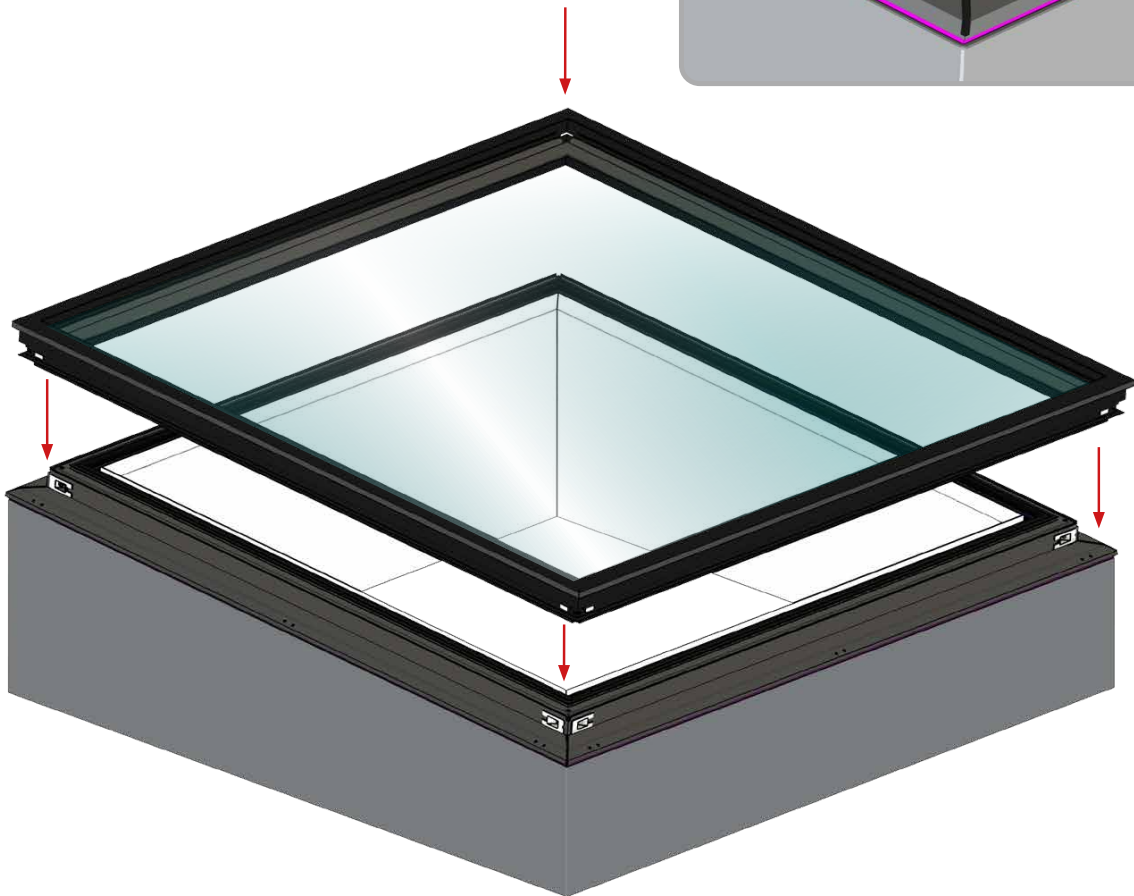
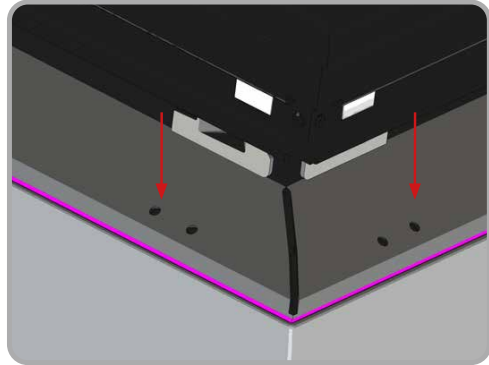


FIXING FLAT GLASS UNIT


9

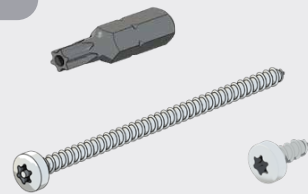

Slide steel brackets into place

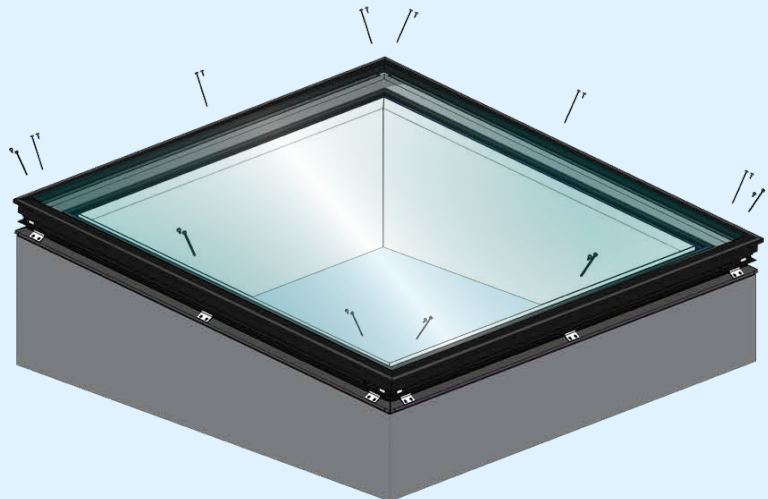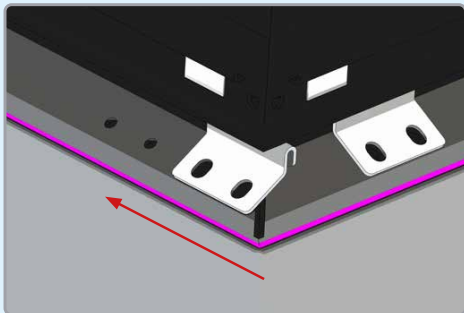


Apply sealant to drilled holes and security screws before fixing down

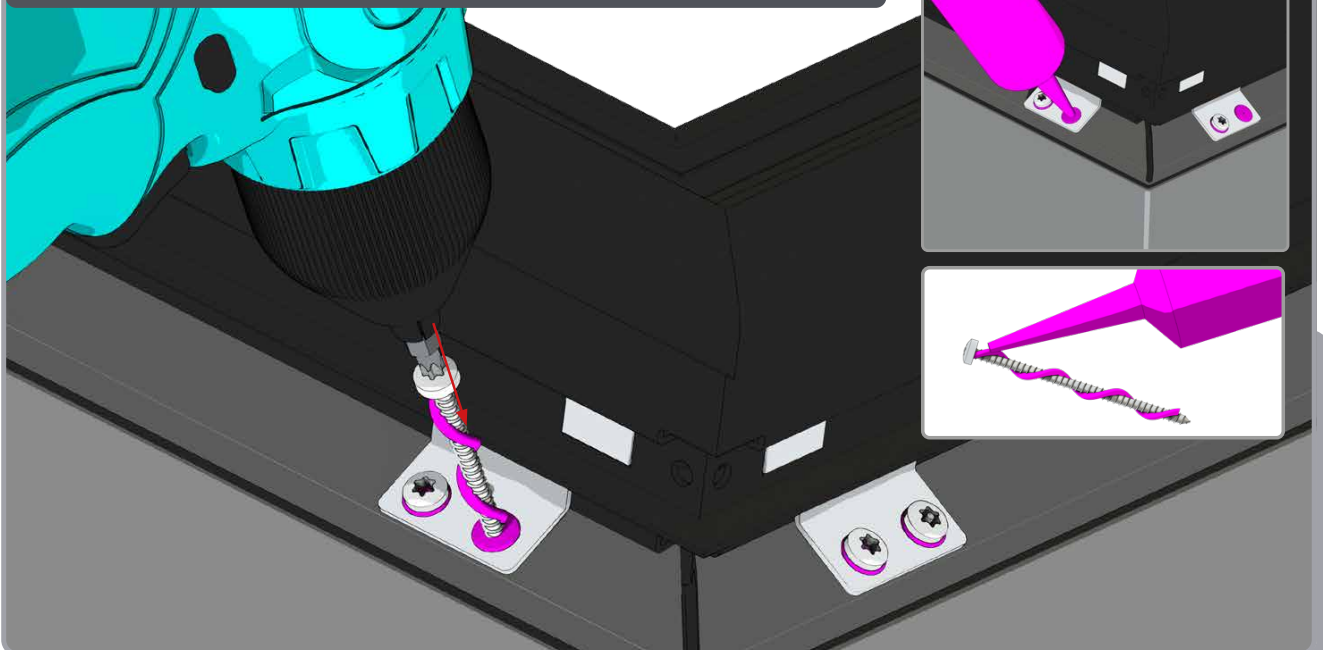


INSTALL EXTERNAL FASCIA'S


10

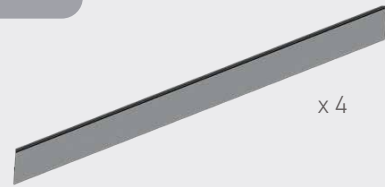


Align fascia's with S clips

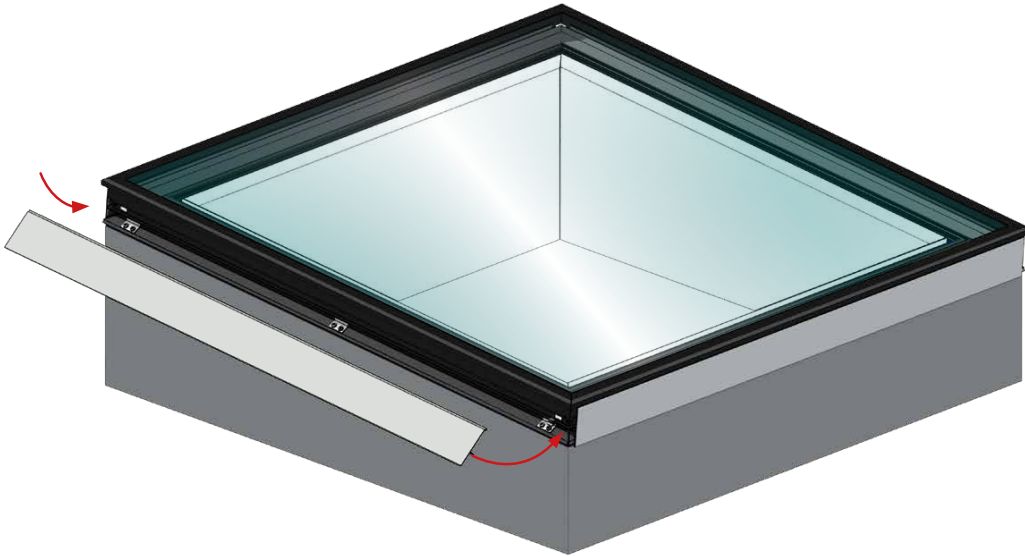

Push clips onto Glazing retainer before installing Fascia

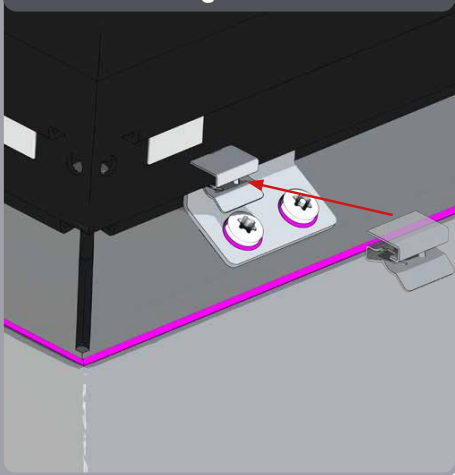

Check alignment before pushing into place

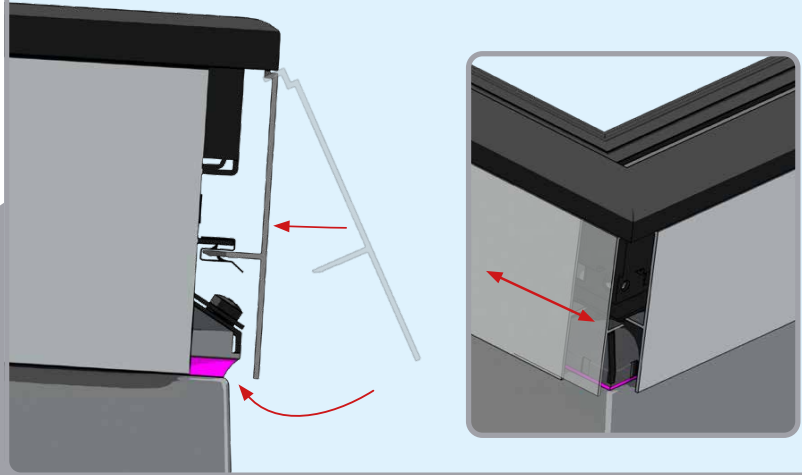

INSTALL CORNER CAPS

11





x 4




Re-fit corner cap clips before fitting caps

Re-fit all corner caps

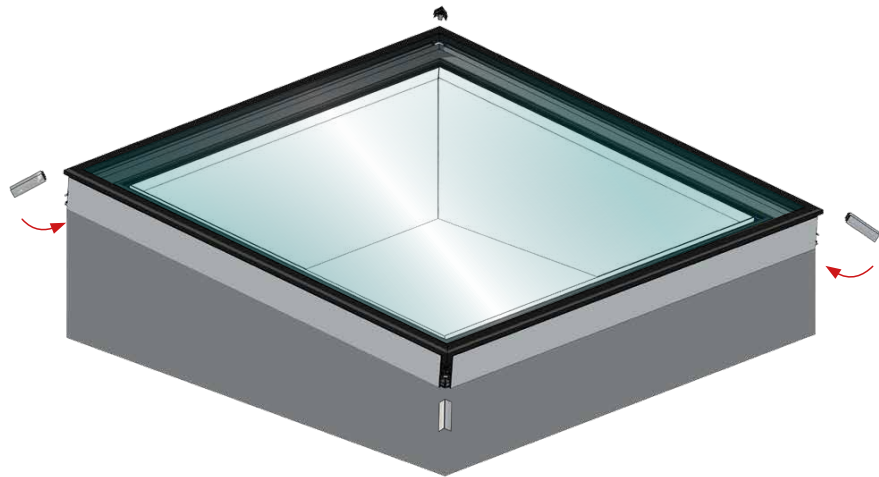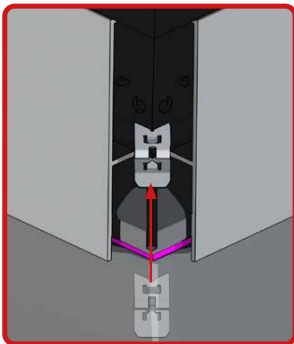

Position top edge of the end cap before rotating into position

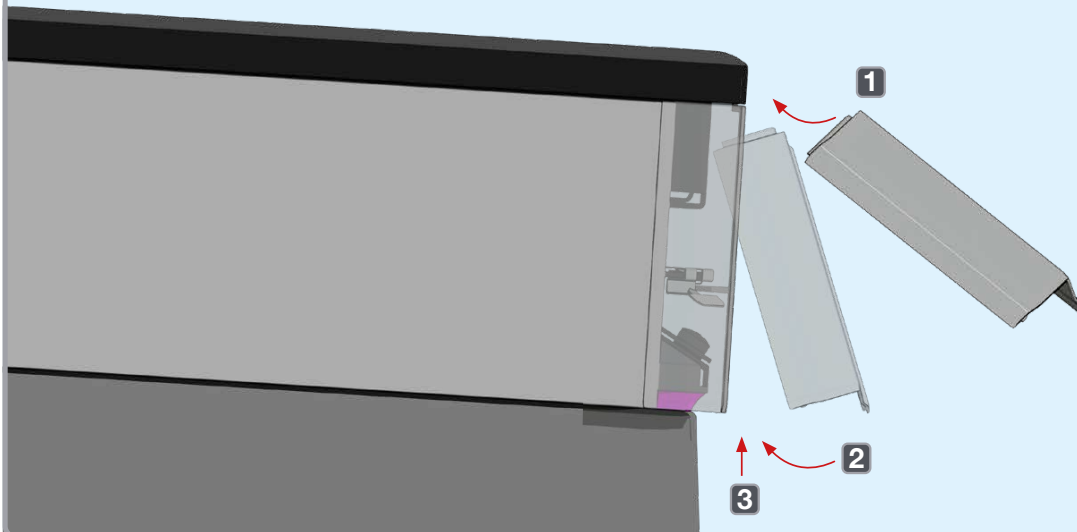



T: +44 (0) 116 2289 3343 E: info@facadecreations.co.uk W: www.facadecreations.co.uk
Registered in England, Company Number: 16267073