


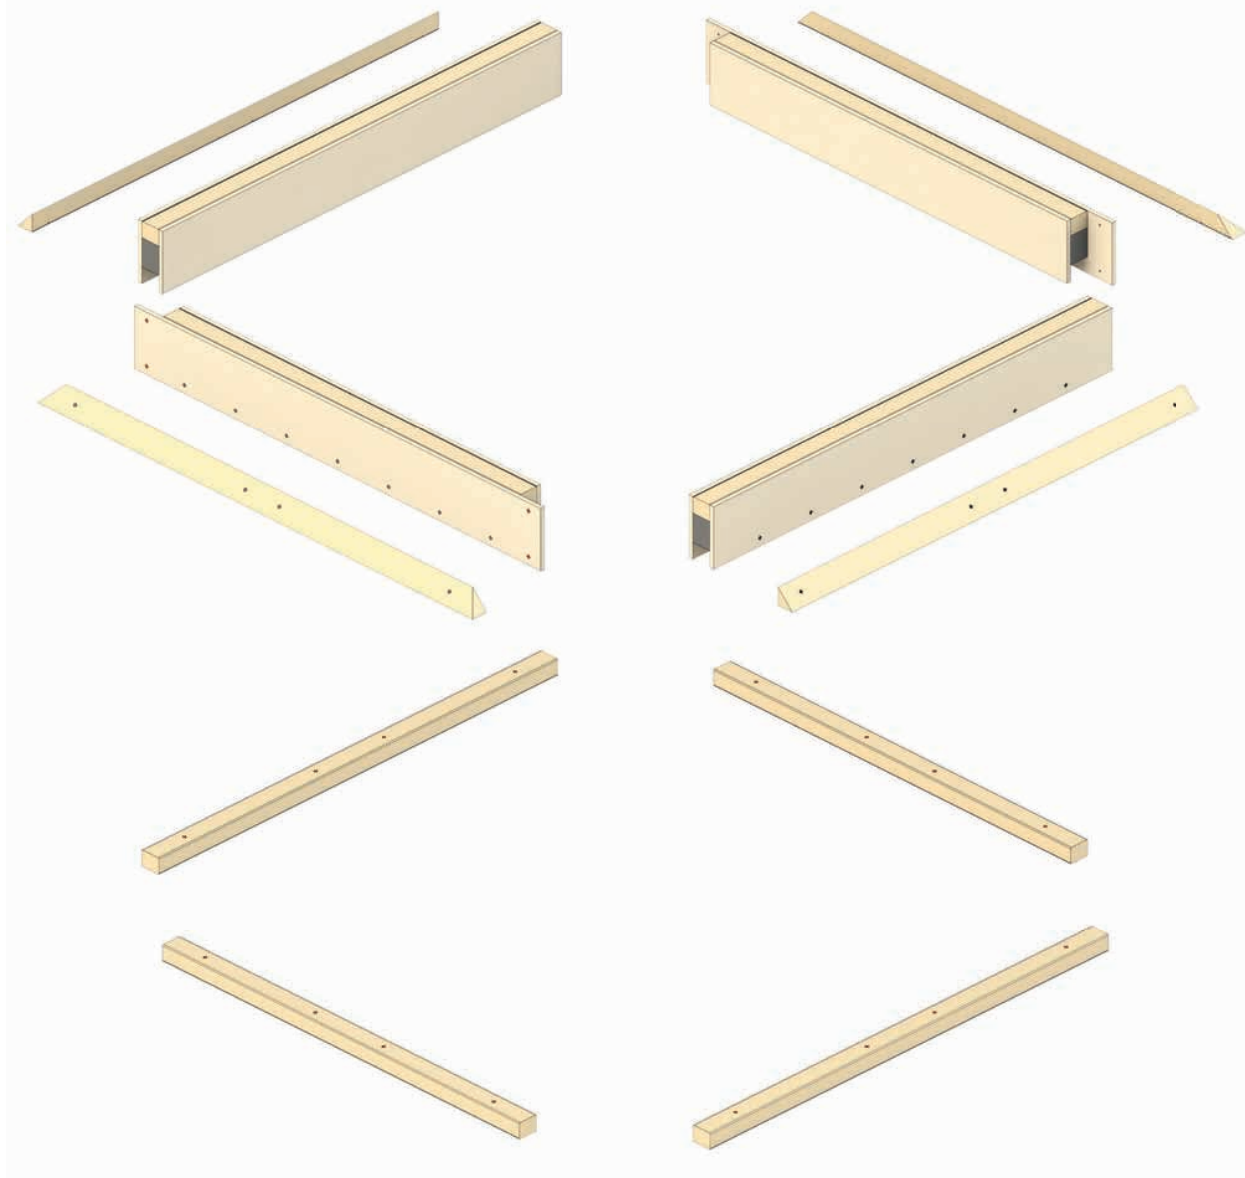

FAÇADE CREATIONS

Upright
Installation Guide



TOOLS / PARTS REQUIRED



Cordless
Screwdriver



Crosshead Driver Bit



5mm x 100mm Screw
(provided)



3.5mm x 45mm Screw
(provided)



Spacer

PACKAGING CONTENTS



5mm x 100mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN RED



3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN BLACK



Spacer X 1



Base Sections x 4



Upright Widths x 2



Upright Lengths x 2



(Optional)
Short Chamfered
Batten x 2



(Optional)
Long Chamfered
Batten x 2





FIT BOTTOM BASE RAILS


1




Position bottom rail battens around structural opening

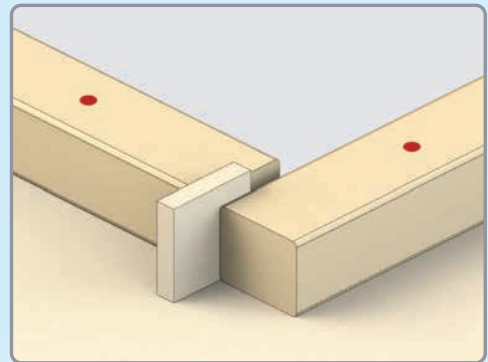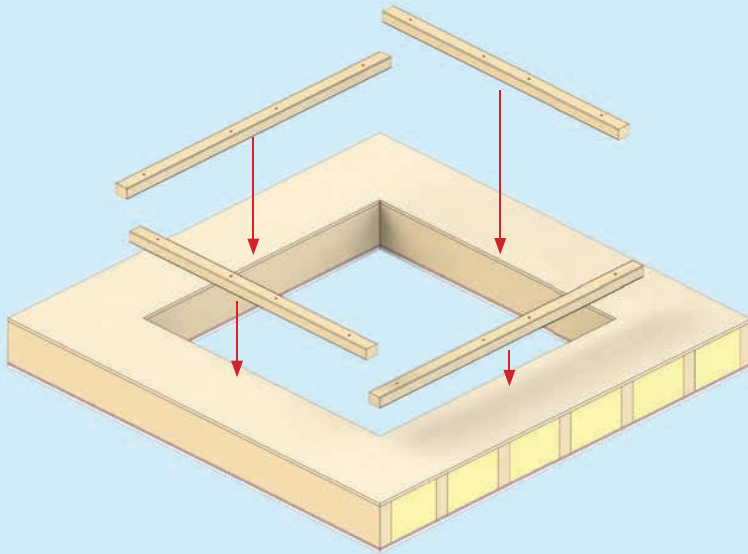

Use Spacer to set to correct gaps

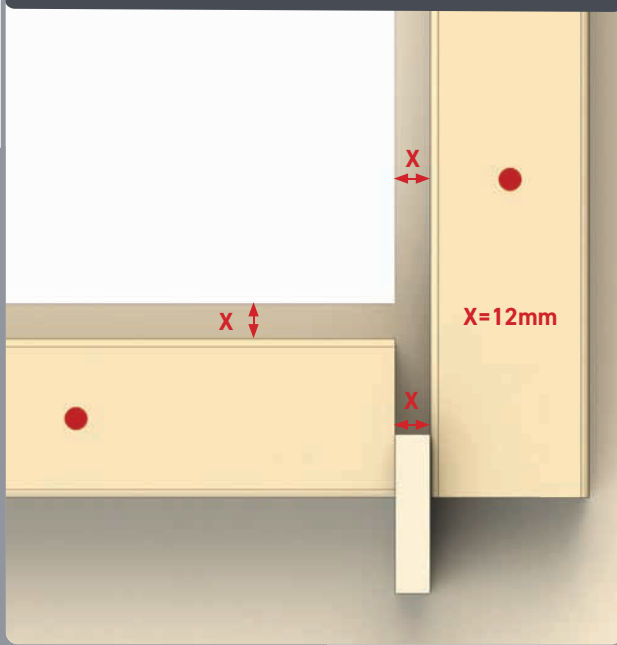

Check diagonals

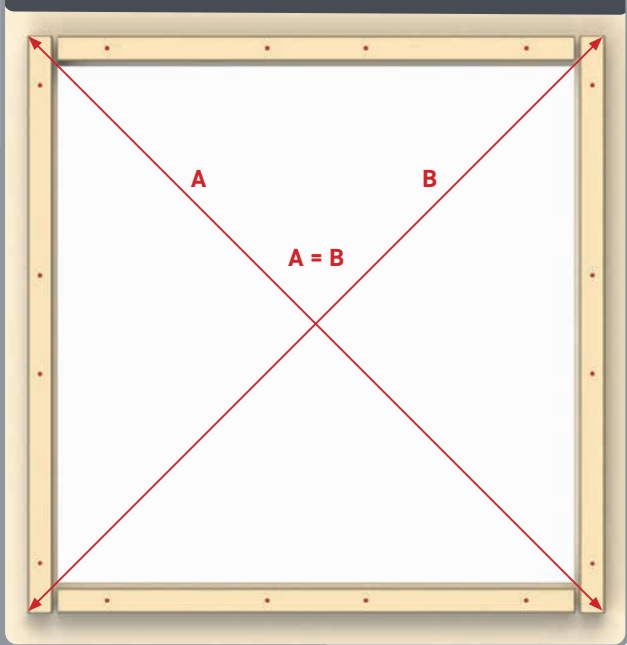






5mm x 100mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN RED






centre

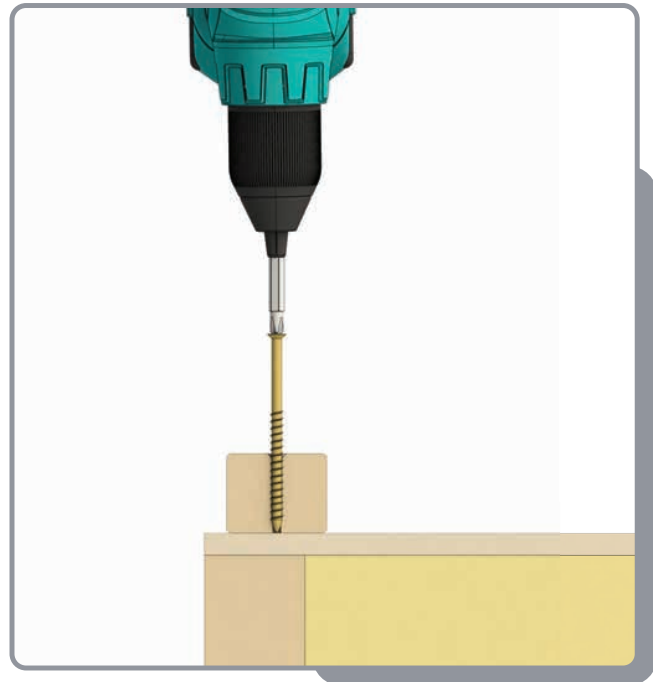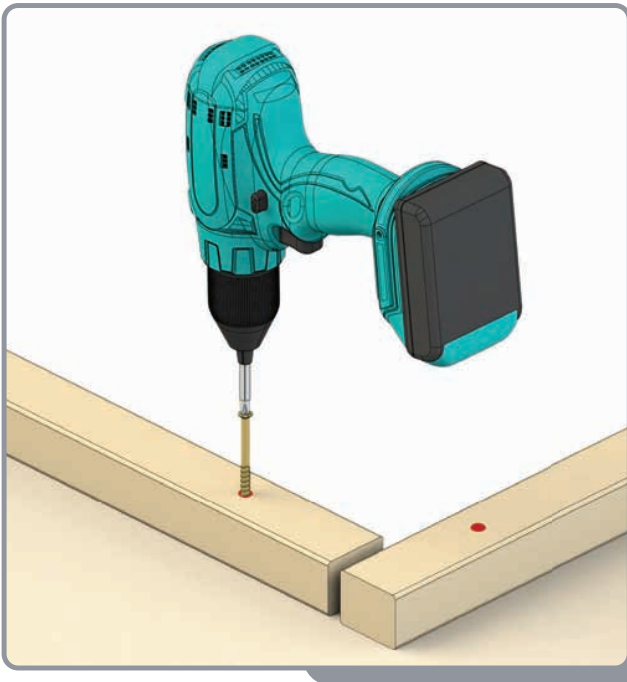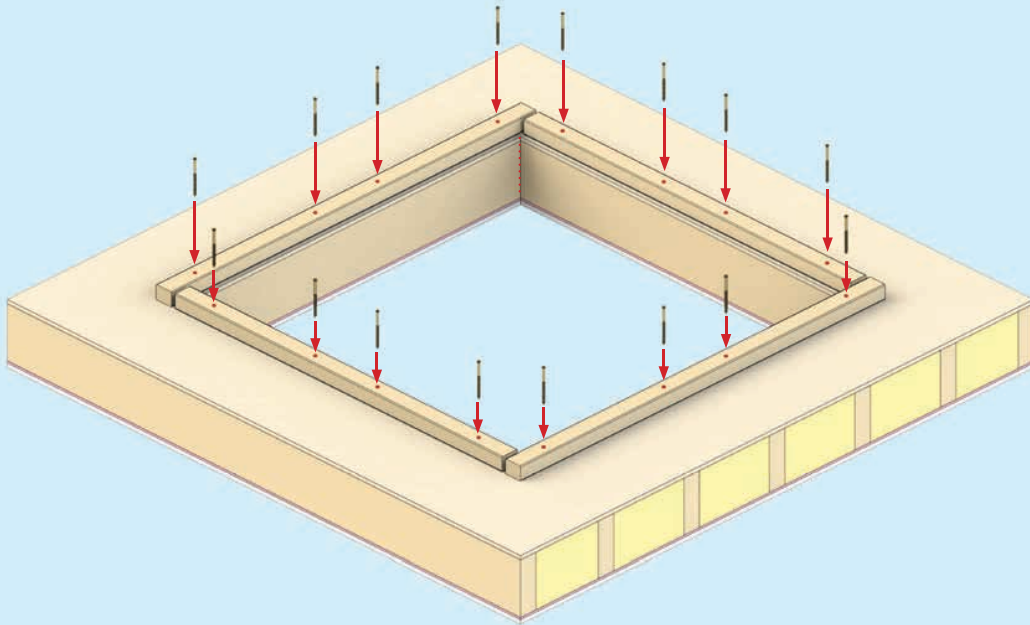


FIT UPSTAND WIDTHS

2

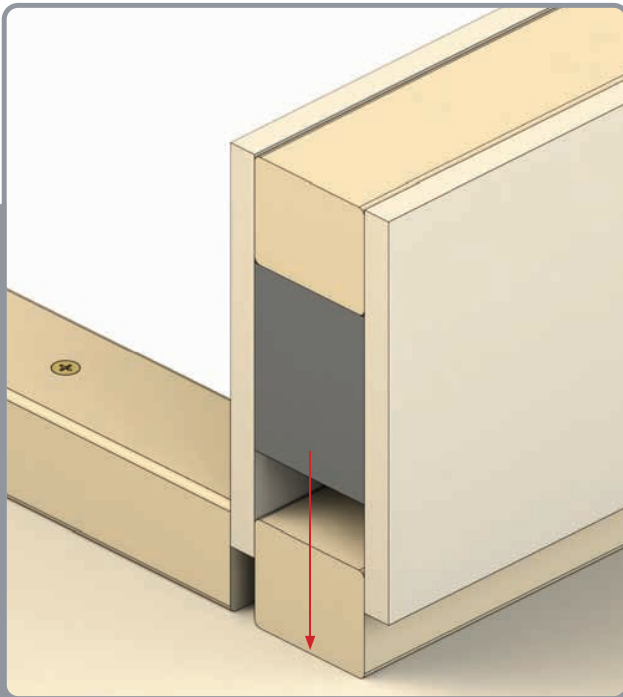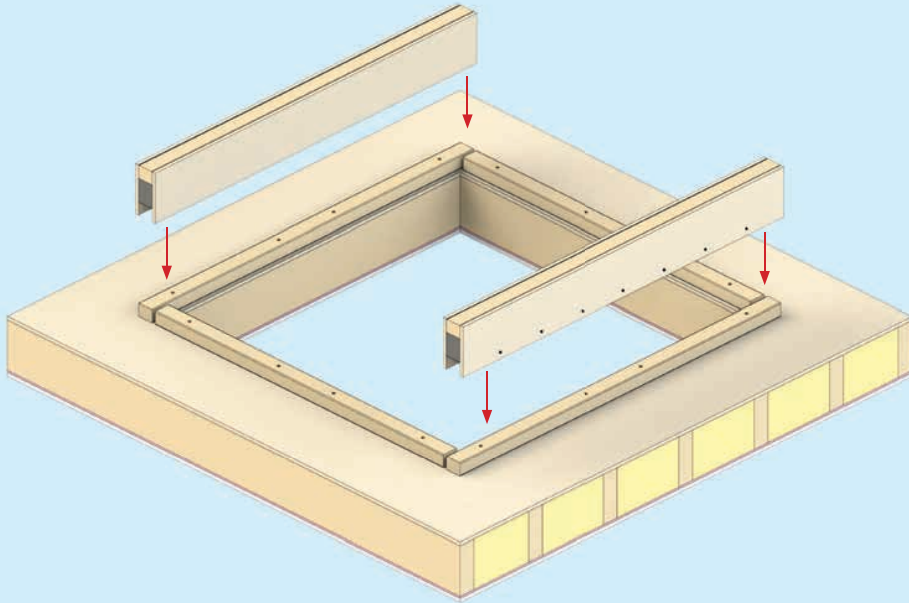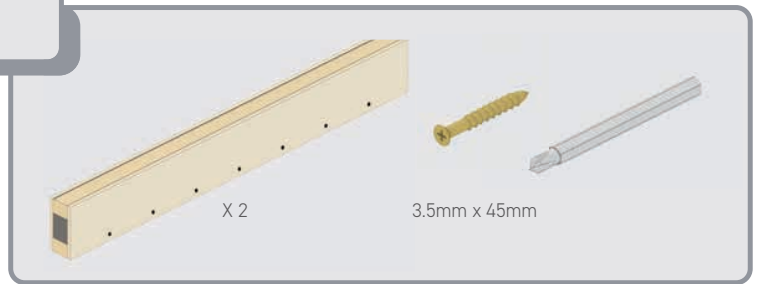



Ensure faces sit flush

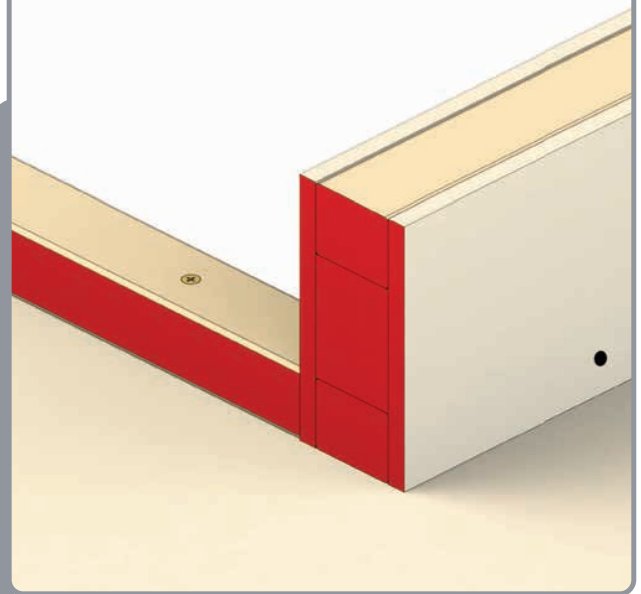






3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN BLACK

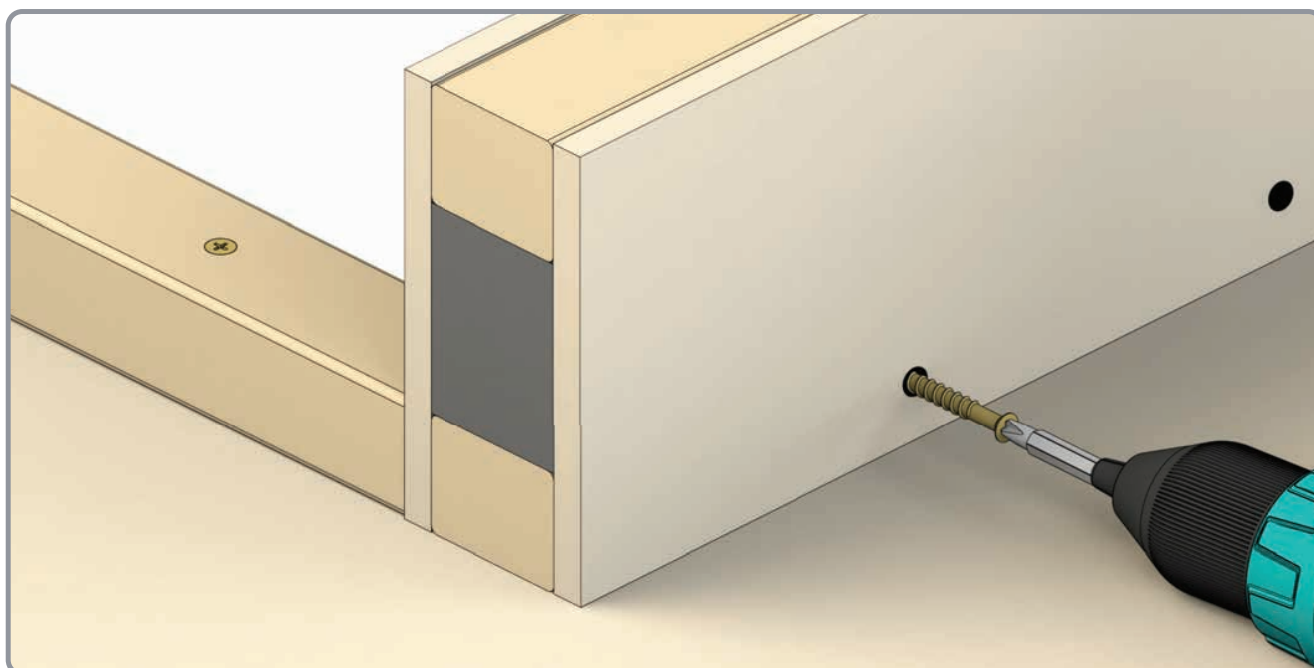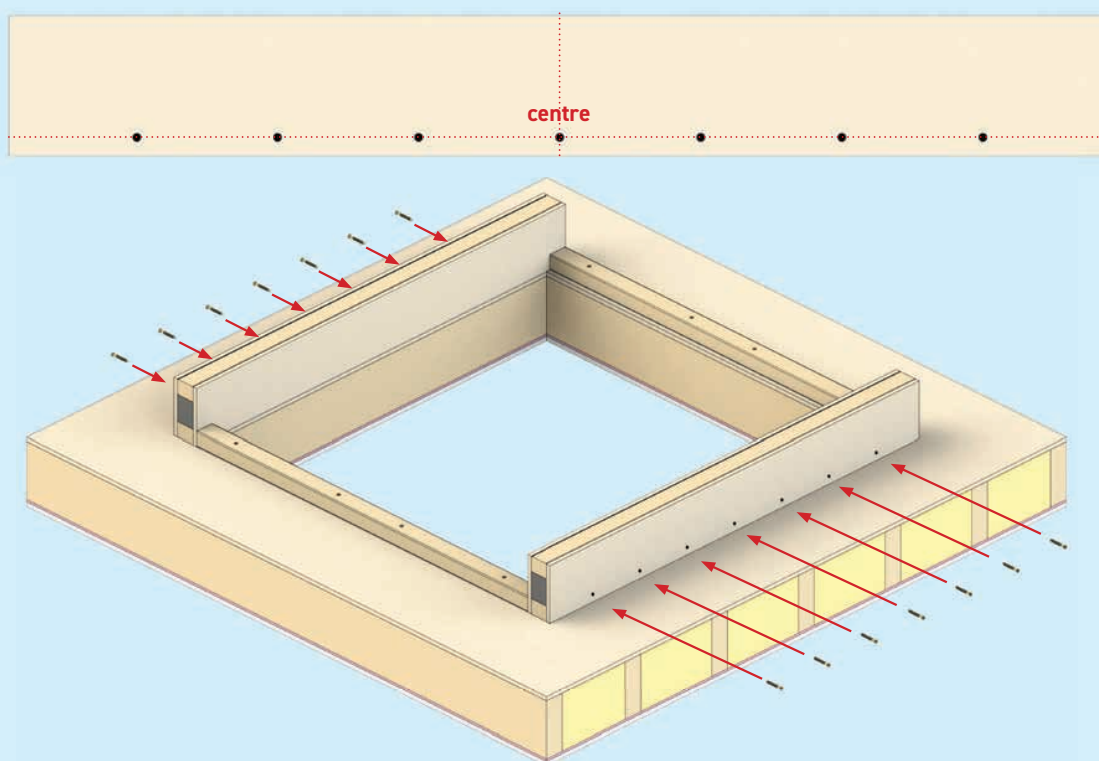


FIT UPSTAND LENGTHS

3

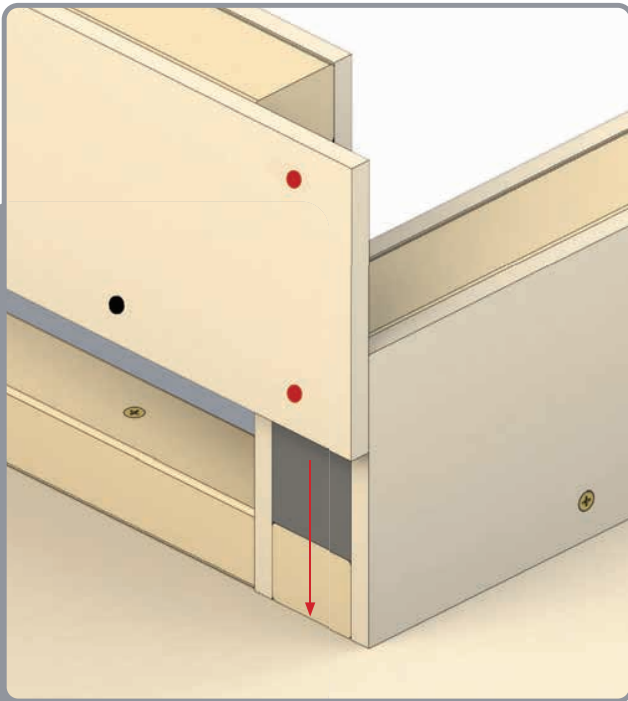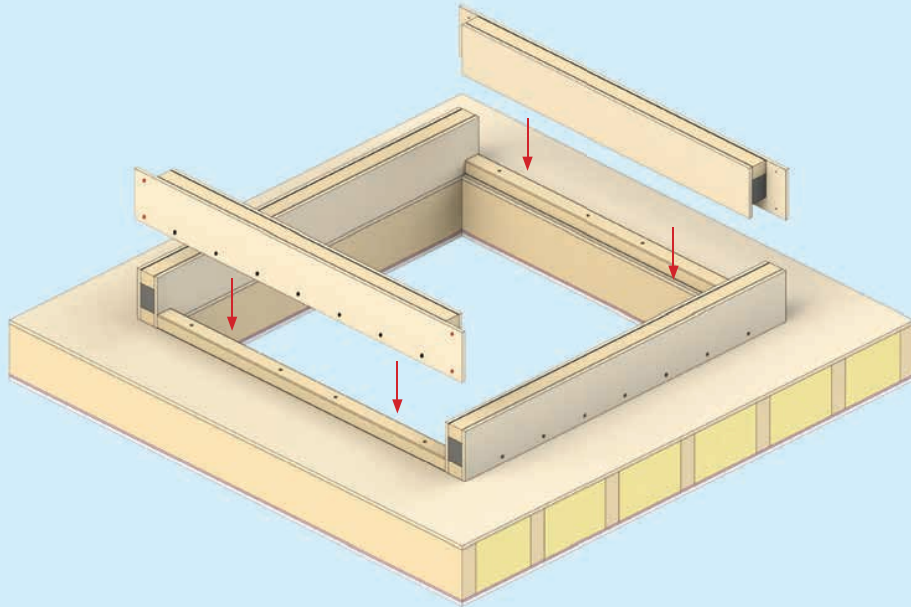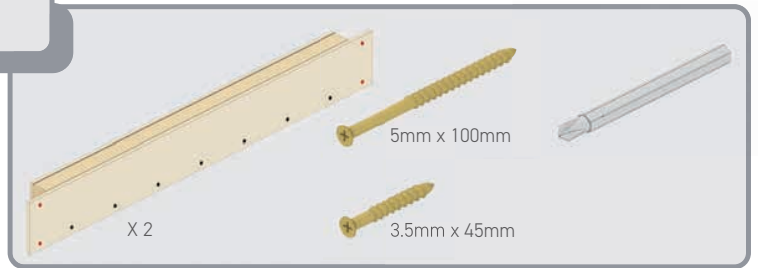



Ensure faces sit flush

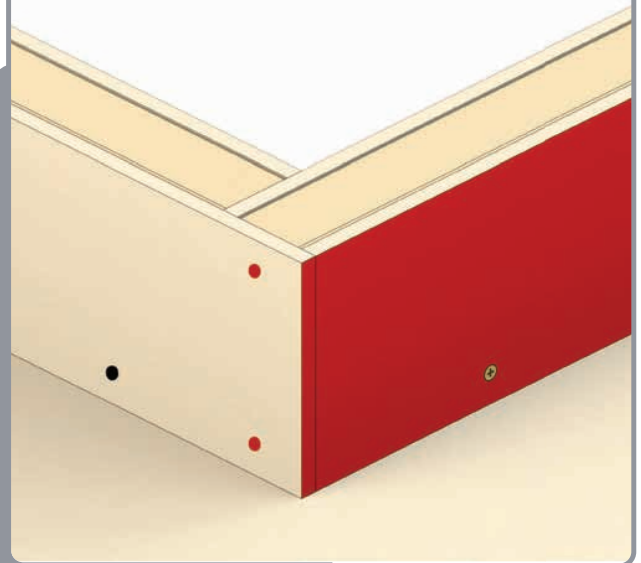

3.5mm x 45mm Screw
(provided)






USE ON FIXING POINTS
MARKED IN BLACK

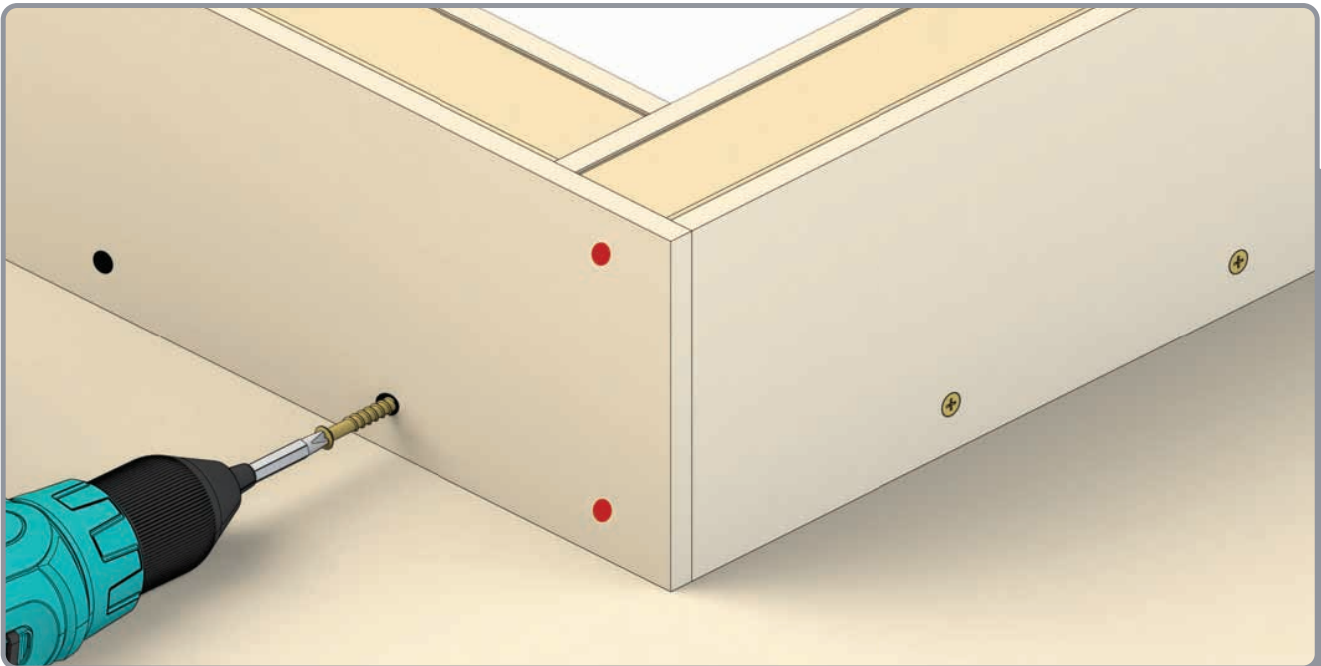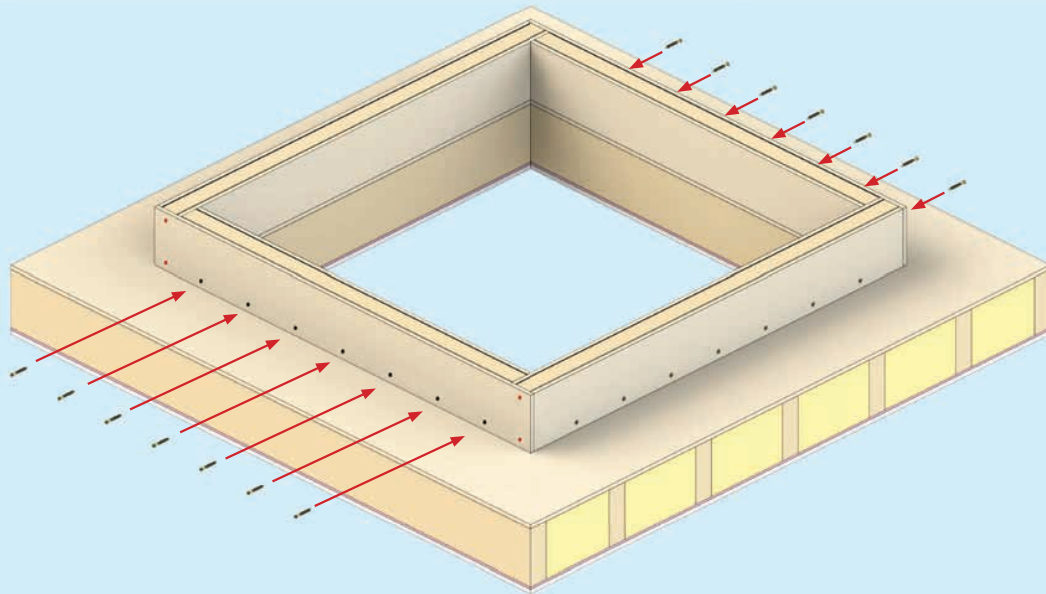


5mm x 100mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN RED

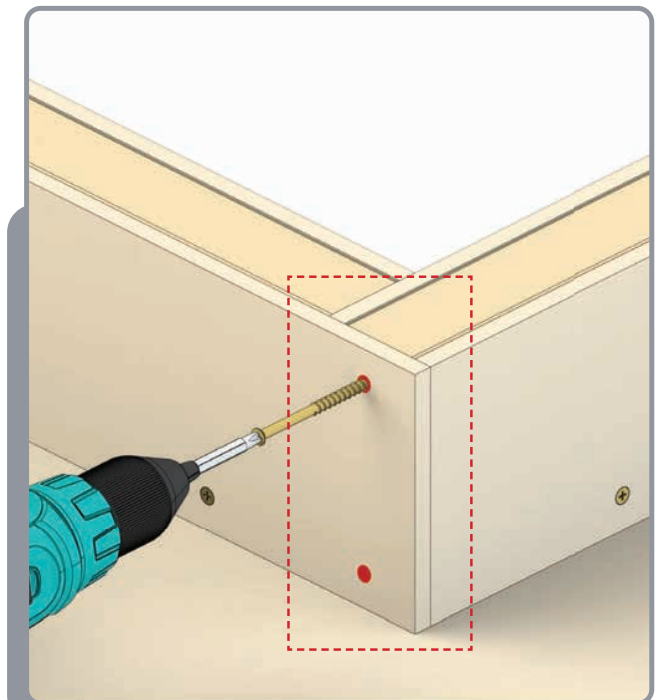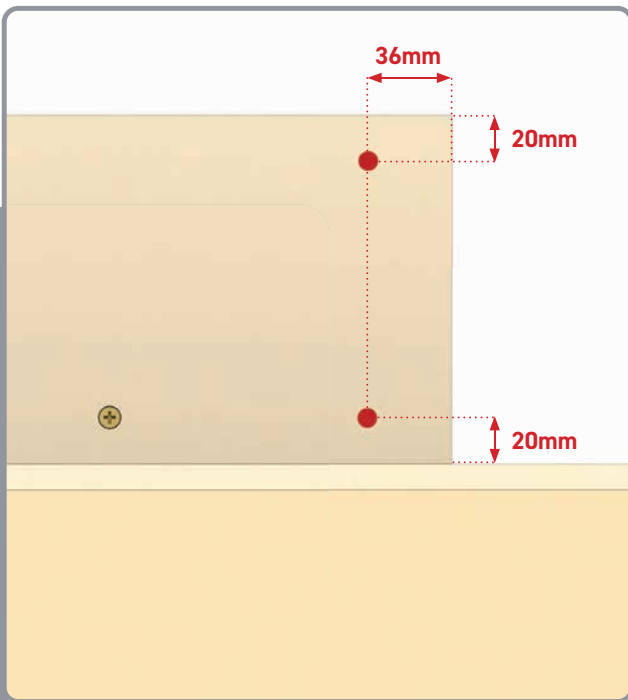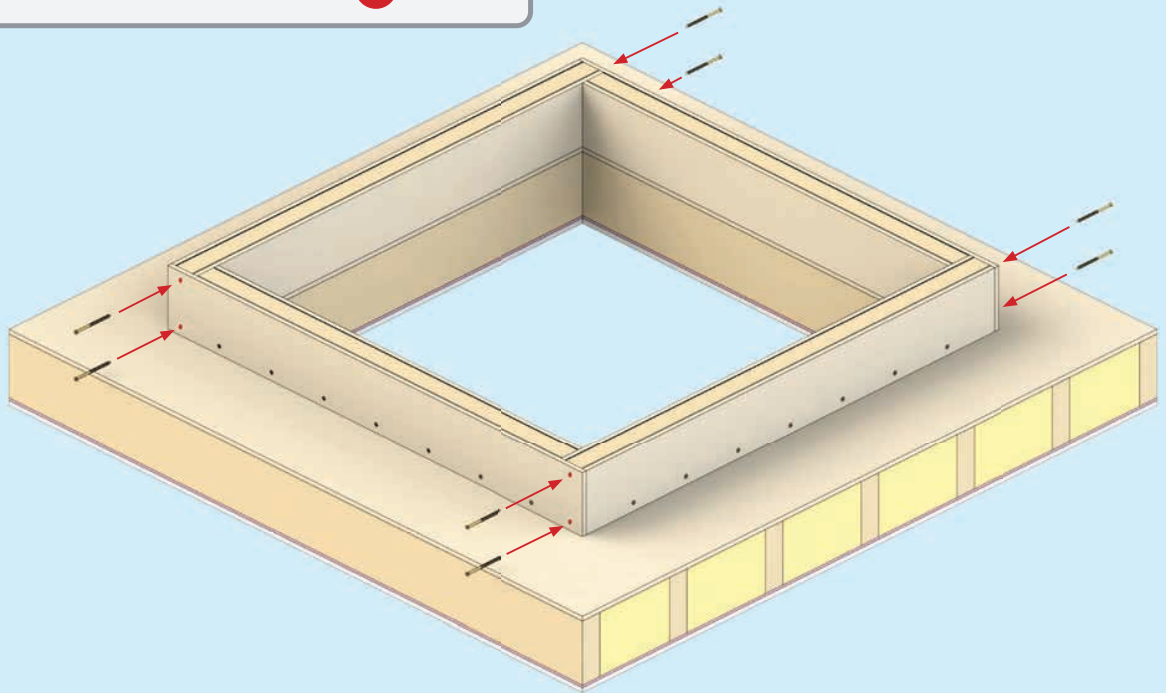


OPTIONAL - FIT CHAMFERED BATTENS

4

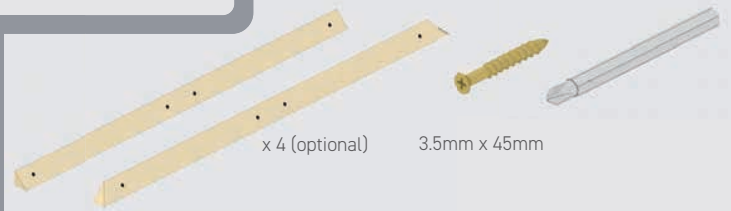


Position chamfered battens

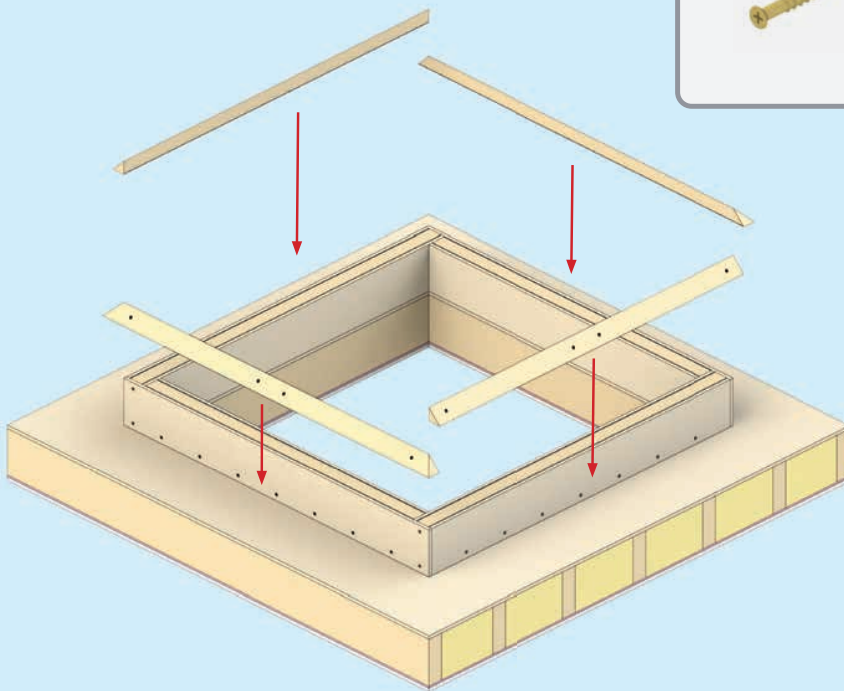


3.5mm x 45mm Screw
(provided)



**USE ON FIXING POINTS
MARKED IN BLACK**

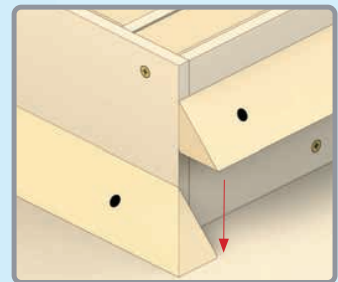

Ensure faces sit flush

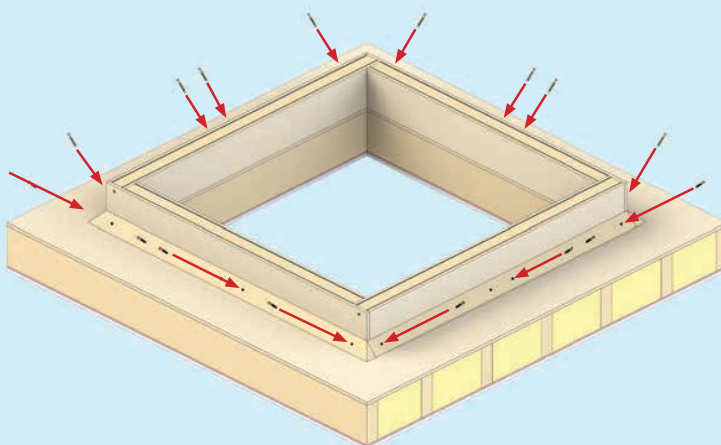



T: +44 (0) 116 2289 3343 E: info@facadecreations.co.uk W: www.facadecreations.co.uk
Registered in England, Company Number: 16267073